


PinPoint III Envelop Fence Row Nozzle Setup

Verify Correct Installation

Fence row nozzles must be plugged in the last drop of the valve control module (VCM). The last drop on the VCM is considered the nozzle drop furthest away from the VCM tube

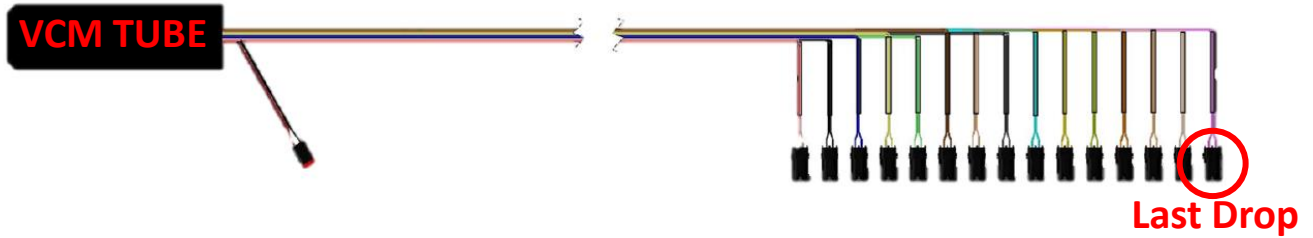


Setup fence row nozzles with boom profile

- 1a. Complete VCM and soft boom setup before setting up fence row nozzles
- 1b. From the home screen navigate to Wrench > Boom/Nozzle > Nozzle Setup

Left Fence Row Nozzle

1. Select Nozzle 1
2. Select an unused profile
3. Change profile text to "Lfence"
4. Set Nozzle Rank to "Fence Row On"

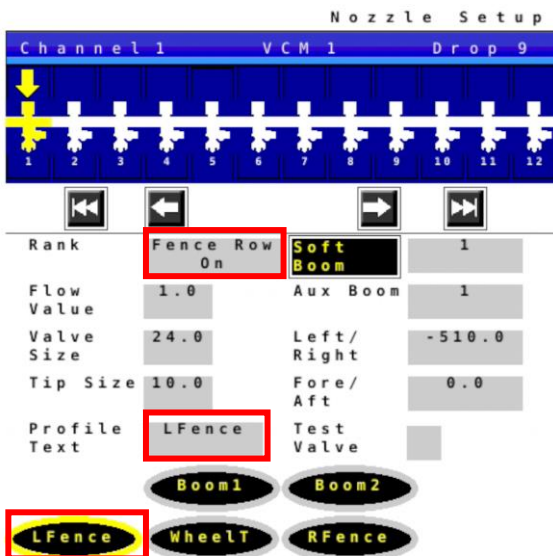

Right Fence Row Nozzle

1. Select Last Nozzle
2. Select an unused profile
3. Change profile text to "Rfence"
4. Set Nozzle Rank to "Fence Row On"

