

120' Truss Boom 15" Nozzle Spacing

With Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	13	11	0	0	✓
2	14	31	12	0	0	✗
3	32	50	13	0	0	⬆
4	51	68	14	0	0	
5	69	86	15	0	0	
6	87	99	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	⬇
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

Without Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	12	11	0	0	✓
2	13	30	12	0	0	✗
3	31	49	13	0	0	⬆
4	50	67	14	0	0	
5	68	85	15	0	0	
6	86	97	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	⬇
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

132' Truss Boom 22" Nozzle Spacing


With Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01
0 gal




New Product Config

UT



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	10	11	0	0	
2	11	19	12	0	0	
3	20	37	13	0	0	
4	38	55	14	0	0	
5	56	64	15	0	0	
6	65	74	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX


Without Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01
0 gal




New Product Config

UT



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	9	11	0	0	
2	10	18	12	0	0	
3	19	36	13	0	0	
4	37	54	14	0	0	
5	55	63	15	0	0	
6	64	72	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

973 PT 120', 20" Nozzle Spacing

With Fence Row Nozzles

Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	19	11	0	0	
2	20	32	12	0	0	
3	33	42	13	0	0	
4	43	55	14	0	0	
5	56	74	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

Without Fence Row Nozzles

Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	18	11	0	0	
2	19	31	12	0	0	
3	32	41	13	0	0	
4	42	54	14	0	0	
5	55	72	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX





9518 TF 60/90', 15" Nozzle Spacing


With Fence Row Nozzles





Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh




 C E01 0 gal 

New Product Config





Soft Boom	Start	End	Soft Boom	Start	End	
1	1	13	11	0	0	
2	14	29	12	0	0	
3	30	46	13	0	0	
4	47	62	14	0	0	
5	63	75	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	





AUX


Without Fence Row Nozzles





Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh




 C E01 0 gal 

New Product Config



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	12	11	0	0	
2	13	28	12	0	0	
3	29	45	13	0	0	
4	46	61	14	0	0	
5	62	73	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

9518 TF 60/90', 20" Nozzle Spacing

With Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	10	11	0	0	
2	11	22	12	0	0	
3	23	34	13	0	0	
4	35	46	14	0	0	
5	47	56	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

Without Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	9	11	0	0	
2	10	21	12	0	0	
3	22	33	13	0	0	
4	34	45	14	0	0	
5	46	54	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

9518 TF 100', 15" Nozzle Spacing

With Fence Row Nozzles

Administrator

ISO

RAVEN

AUX

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	21	11	0	0	✓
2	22	41	12	0	0	✗
3	42	62	13	0	0	⬆
4	63	83	14	0	0	
5	0	0	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	⬇
9	0	0	19	0	0	
10	0	0	20	0	0	

Home, ECG, Wrench icons

UT, Camera, Settings icons

Without Fence Row Nozzles

Administrator

ISO

RAVEN

AUX

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	20	11	0	0	✗
2	21	40	12	0	0	
3	41	61	13	0	0	⬆
4	62	81	14	0	0	
5	0	0	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	⬇
9	0	0	19	0	0	
10	0	0	20	0	0	



Home, ECG, Wrench icons

UT, Camera, Settings icons





9518 TF 100', 20" Nozzle Spacing


With Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

 C E01 0 gal 




New Product Config





Soft Boom	Start	End	Soft Boom	Start	End	
1	1	16	11	0	0	✓
2	17	31	12	0	0	✗
3	32	46	13	0	0	⬆
4	47	62	14	0	0	
5	0	0	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	⬇
10	0	0	20	0	0	

AUX





  


Without Fence Row Nozzles

Administrator ISO Wi-Fi GPS Bluetooth Printer Refresh

 C E01 0 gal 




New Product Config



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	15	11	0	0	✓
2	16	30	12	0	0	✗
3	31	45	13	0	0	⬆
4	46	60	14	0	0	
5	0	0	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	⬇
10	0	0	20	0	0	

AUX

9600 N 60/90', 15" Nozzle Spacing

With Fence Row Nozzles

Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config

Soft Boom	Start	End	Soft Boom	Start	End	
1	1	13	11	0	0	
2	14	29	12	0	0	
3	30	46	13	0	0	
4	47	62	14	0	0	
5	63	75	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

Without Fence Row Nozzles

Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

E01 0 gal

New Product Config



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	12	11	0	0	
2	13	28	12	0	0	
3	29	45	13	0	0	
4	46	61	14	0	0	
5	62	73	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX





9600 60/90', 20" Nozzle Spacing


With Fence Row Nozzles





Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

 C E01 0 gal 




New Product Config





Soft Boom	Start	End	Soft Boom	Start	End	
1	1	10	11	0	0	
2	11	22	12	0	0	
3	23	34	13	0	0	
4	35	46	14	0	0	
5	47	56	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX





  


Without Fence Row Nozzles





Administrator ISU Wi-Fi GPS Bluetooth Printer Refresh

 C E01 0 gal 

New Product Config



Soft Boom	Start	End	Soft Boom	Start	End	
1	1	9	11	0	0	
2	10	21	12	0	0	
3	22	33	13	0	0	
4	34	45	14	0	0	
5	46	54	15	0	0	
6	0	0	16	0	0	
7	0	0	17	0	0	
8	0	0	18	0	0	
9	0	0	19	0	0	
10	0	0	20	0	0	

AUX

