



1. USB Host Menu "Thumb drive menu".

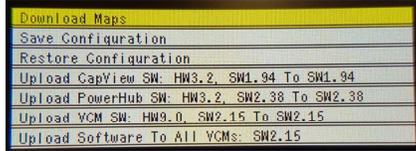


2. Save and Restore Config.

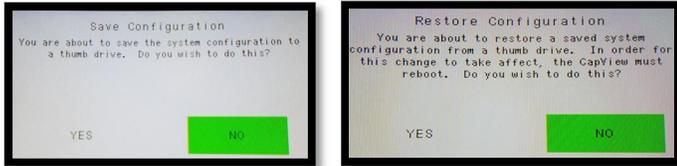


In order to see "restore config" you must first have a saved config on the thumb drive.

3. System Setup Menu

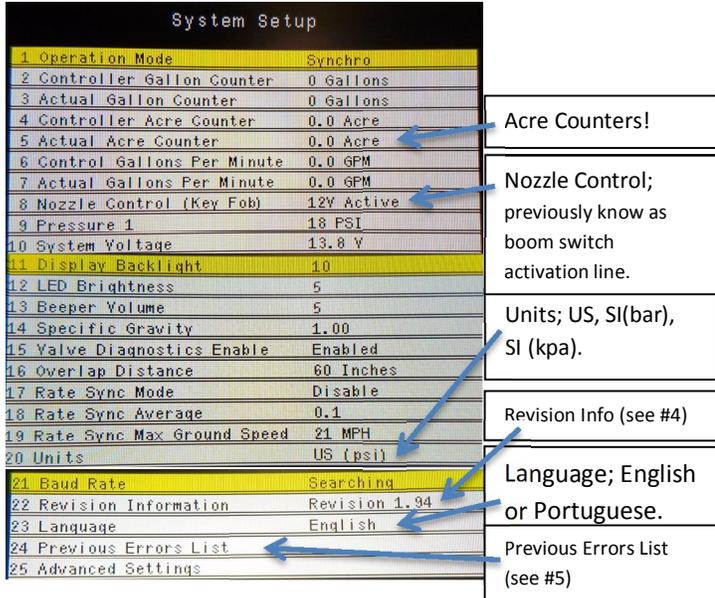


4. Revision Information (line 22)

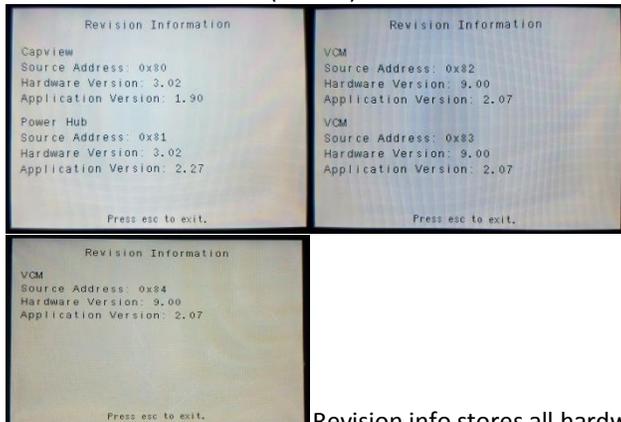


Revision info stores all hardware items by CAN address. Displays version info of all hardware and software items on the system.

5. Previous Errors List (line 24)

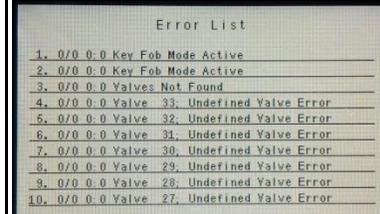

Lists 50 most recent errors.

6. Advanced System Setup list.


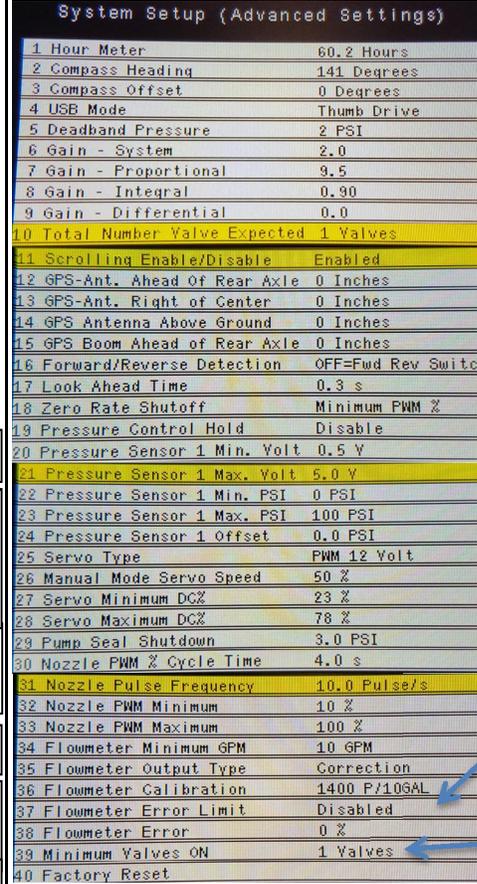


Flowmeter Error Limit: range (disable to 50%). Flowmeter error over your chosen % will show fault and beep alarm.

Flowmeter Error: displays real-time % difference between flowmeter and calculated flow.


Min Valves ON; minimize direct injection over application.

7. Auto Location Setup

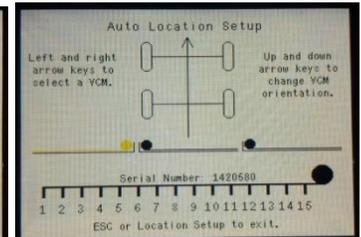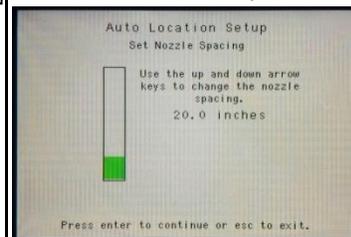

Pic 1, now in 0.10 increments.

Pic 2, shows 15 drop VCM.

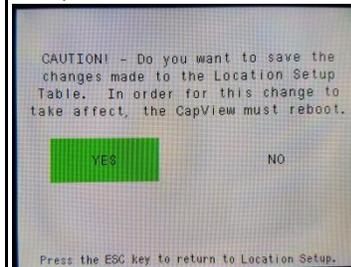

Pic 3, shows the added verbiage accompanying a forced power down after location setup.