
## Fast 9518TF 60/90' 90' 6 section on 20" spacing

Make	Fast
Model	9518TF 60/90'
Year	

	Total Nozzles	54
1	Nozzle spacing (IN)	20
1	Number of sections	6

Section	Number	VCM	VCM	Extension
Number	Nozzles	Size	Orientation	Length
Section 1	9	9	Right	40
Section 2	7	9	Right	25
Section 3	11	15	Right	5
Section 4	11	15	Left	5
Section 5	7	9	Left	30
Section 6	9	9	Left	45
Section 7				
Section 8				
Section 9				
Section 10				
Section 11				
Section 12				

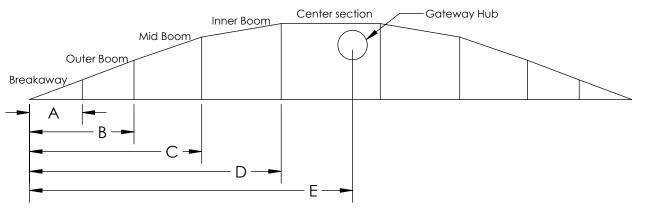

REV.

ECR

40620 Production release

**DESCRIPTION** 

DATE

7/18/22

Ву

ΚP

Boom Folds and Hub mounting - Count number of nozzles to each point				
Boom Breakaway		Nozzle count Dimension A		
Outer Fold	9	Nozzle count Dimension B(if Applicable)		
Inner Fold	16	Nozzle count Dimension C		
Primary Fold		Nozzle count Dimension D		
Gateway Location	26	Nozzle count Dimension E, Center mount = 0		

