


# EXPORTING GPS

## GS2/GS3 STARFIRE 3000 OR 6000

- Models - John Deere Sprayers

**FIGURE 1:**


1. Select the menu icon (1).
2. Select the GPS receiver icon (2).

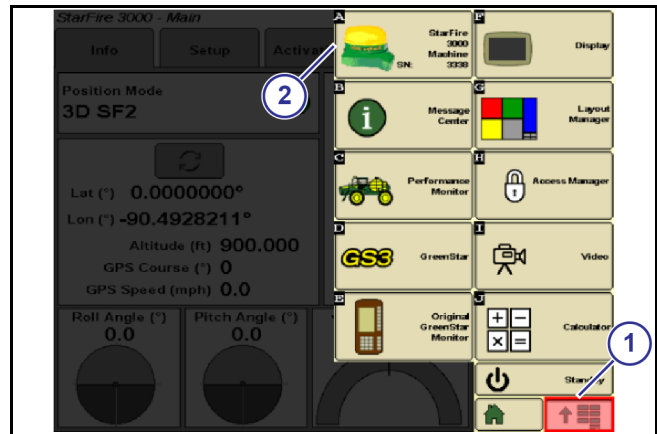

**FIGURE 1**

**FIGURE 2:**


3. From the GPS receiver main screen, select the Serial Port tab (1).

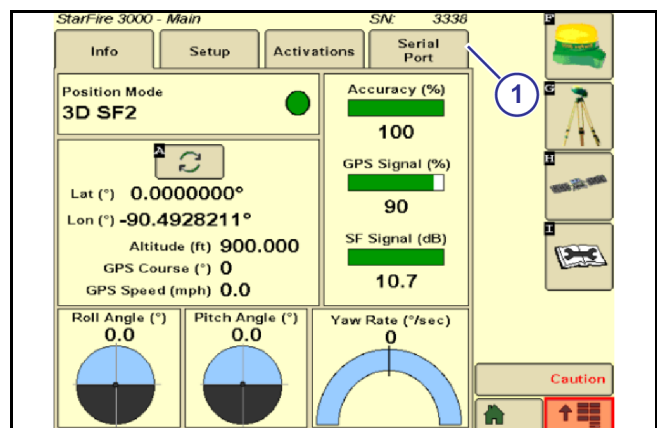

**FIGURE 2**

**FIGURE 3:**

4. On the Serial Port tab, change the Baud Rate (1) to 38400.
5. Change the Output Rate (2) to 10 hz.
6. Turn on, make sure that there is a check mark (3) in the boxes next to:
  - GGA
  - VTG
  - ZDA
7. Connect the GPS cable between the Starfire receiver and the sprayer cab and the 9-pin serial cable end to the CapView display.

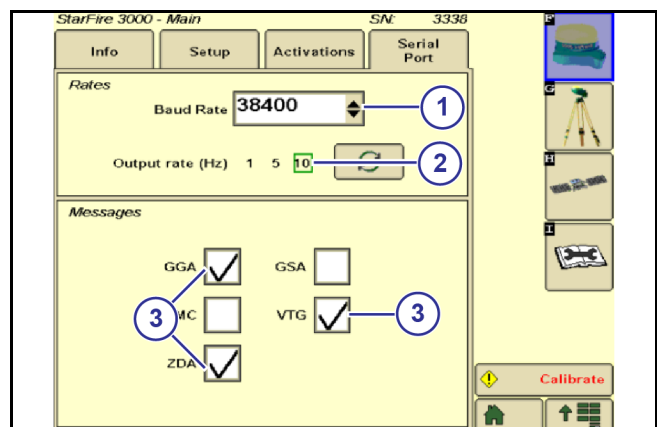

**FIGURE 3**

Models	Part Number	Description
4630/R4023	120051-001	GPS Cable
All other models	120047-001	GPS Cable

---

**NOTES**