

Integration Instructions

PinPoint™ III ENVELOP on AgTruck 430

Note: prior to performing any setup on the machine, perform the factory reset procedure.

Tap the Settings icon and select Initial Setup > Configuration > Factory Reset > Yes.

Below is an example of the PinPoint™ III home screen.

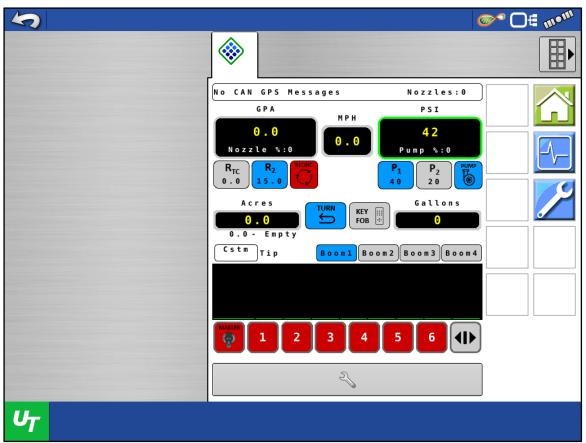


Figure 1 — Task Controller Home Screen

Menu Setup

1. Figure 1: Select the CapstanAG PinPoint™ III icon from the program icons on the left side of the task controller screen. This icon may be located in slightly different places depending on the task controller.

Note: ANYTIME you change settings, you MUST tap the Settings icon 2 to go into the Settings menu and select Initial Setup > Configurations > Software Restart to save settings. If the unit is turned off or loses battery power before this is done, the new settings will not be saved. Refer to Figure 6 for the location of this function.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 3/20/2025 Page 1 of 25 Rev A



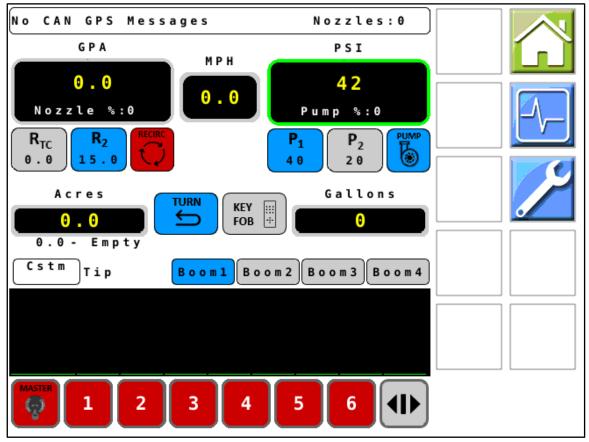


Figure 2 — PinPoint™ III Home Screen

2. Figure 2: Basic running settings and information are displayed on the PinPoint™ III home screen. The boom configuration can be selected from the saved configurations at the bottom of the screen. To edit these configurations and set up other features of the PinPoint™ III software, tap the **Settings** icon at the right side of the screen.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 2 of 25

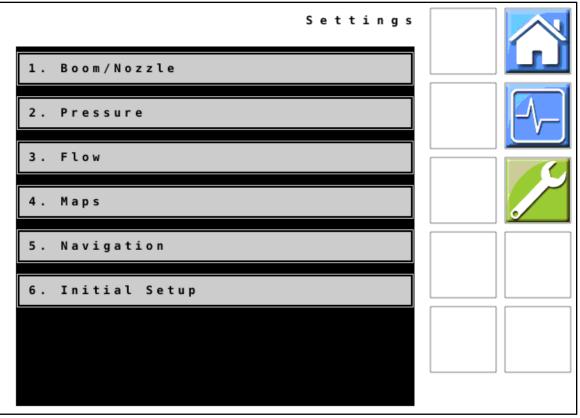


Figure 3 — Settings Menu

3. Figure 3: Take note of the different menus which are reached from the settings menu. Some of these will require input of machine specific variables. Other settings only need to be verified correct from the factory.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 3/20/2025 Page 3 of 25 Rev A

Select Initial Setup > VCM Setup > Geometry Setup

Note: Complete this step BEFORE performing any other boom setup.

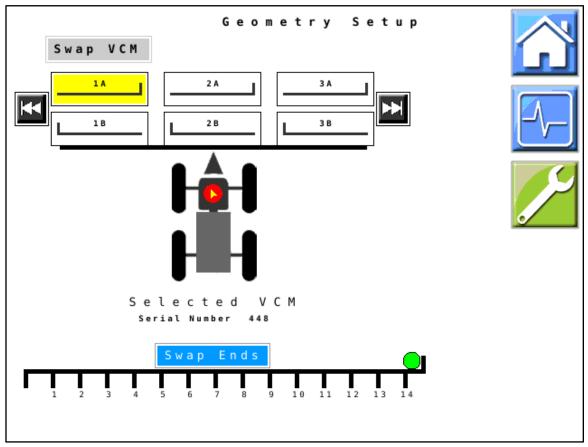


Figure 4 — Geometry Setup

Note: The green dot on the display indicates the position of the selected VCM (highlighted in yellow) in relation to the nozzles on its hub CAN channel.

- 5. Figure 4: VCMs must be in the correct order and orientation on the boom. If there is only one VCM connected to a with that VCM highlighted to orient the VCM correctly hub CAN channel, use the Swap Ends icon on the boom. VCMs can be mounted with the tube towards the center of the machine (green dot) and the pigtail running towards the outside tip, or vice versa.
 - If two VCMs are located on the same hub CAN channel, first use the **Swap VCM** icon with these VCMs highlighted to orient them correctly left to right, and then make sure the orientation (swap ends) is correct.
- 6. Use the **Left** and **Right Scroll** icons to scroll through all the VCMs installed on the machine. Verify each of their locations and serial numbers. When the orientation and position of VCMs is correct, all the VCMs will show in order left to right on the screen exactly as they do across the boom on the machine.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Page 4 of 25 Rev A 3/20/2025

7. Verify the order and orientation of the VCMs using the unit key fob or Capstan app.

Note: This MUST be done before continuing any further with setup. Failure to verify the VCM orientation will result in incorrect automatic nozzle shutoff.

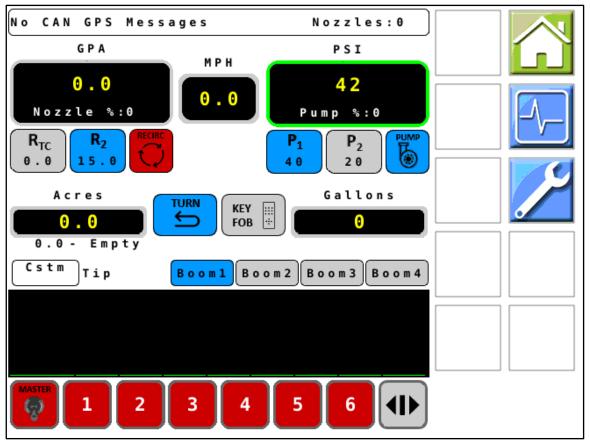


Figure 5 — Key Fob Verification

Note: The CapstanAG Mobile App can be used with the system in key fob mode for this test procedure.

- 8. Figure 5: Tap the **Home** icon to return to the home screen.
- 9. Tap the **Key Fob** icon to set key fob mode to **ON**.
- 10. Locate the key fob remote control or use the Capstan app. Using the right arrow key on the key fob or the app, turn on each of the nozzles one at a time across the boom. If the VCM orientation and position is correct, the nozzles will turn on in order left to right across the boom. If the nozzles do not turn on in the correct order, navigate back to the **Geometry Setup** screen and correct any errors.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 3/20/2025 Page 5 of 25 Rev A

11. Tap the **Settings** icon and select **Initial Setup > Configuration**.

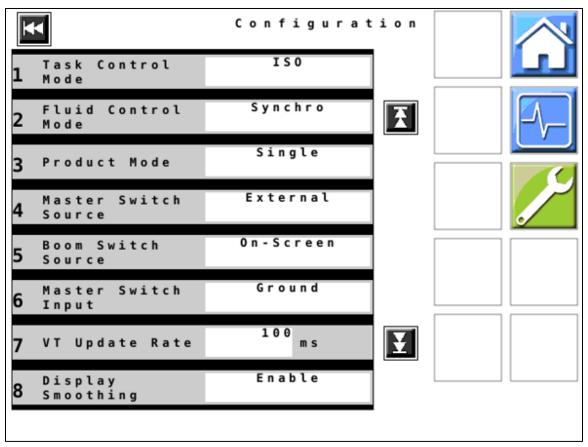


Figure 6 — Configurations Page 1

12. Figure 6: Verify that all values displayed on your unit match those shown here. Change values if necessary.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 6 of 25

13. Figures 7 & 8: Use the **Scroll Down** icon to view the second and third pages and verify the values on your unit correctly match your machine's specifications. Change values if necessary.

K	Configurat	ion
9 Nozzle Spacing	20.00 in	
10 Total Number Of	8 0	T
11 Factory Reset		
12 Maximum TC Sections	8 0	
13 Selected VT	Ag Leader, 38	
14 Selected TC	Ag Leader, 247	
15 Aux Boom Configuration	No Config	¥
16 Software Restar	t	

Figure 7 — Configurations Page 2

Note: Line 16 is the Software Restart function used to save settings after editing. If the unit is turned off or loses battery power before this is done, the new settings will not be saved.

Note: The Maximum TC Sections field must be greater than or equal to the number of nozzles on the boom, with the exception of rate controllers which will not accept as many nozzles. For example, the Case Pro 700 only accepts 32 sections.

17 Machine Configuration	<new config=""></new>	
18 Fill Station	Disable	T
19 Language	English	
20 Units (Pressure)	PSI	

Figure 8 — Configurations Page 3

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 7 of 25

14. Tap the **Back** icon twice to return to the **Settings** menu. Select **Boom/Nozzle > Nozzle Bounds**.

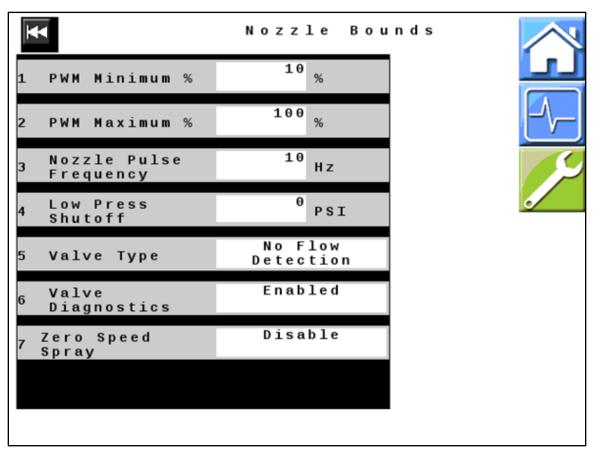


Figure 9 — Nozzle Bounds

15. Figure 9: The information in the fields on this screen is machine specific, verify that it is correct for your machine, and change any settings if necessary.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 8 of 25

16. Tap the **Back** icon to return to the **Boom/Nozzle** menu. Select **Nozzle Setup**.

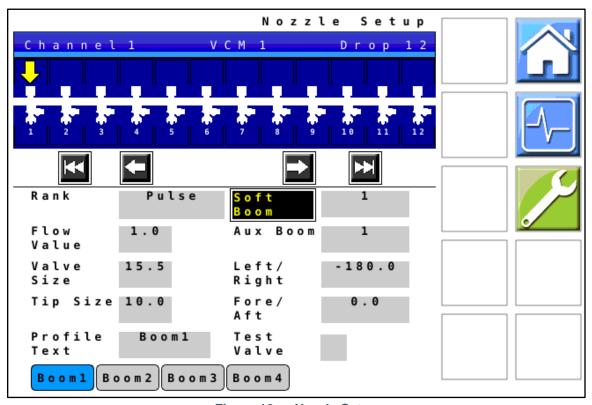


Figure 10 — Nozzle Setup

17. Figure 10: Use the Nozzle Setup screen to set up and name custom boom profiles.

Note: Valve size value may be either 15.5 (for 7-watt valves with black heat shrink tubing) or 24 (for 12-watt valves with blue heat shrink tubing). Verify which valves your unit is equipped with.

18. Select the **Soft Boom** icon to configure the soft boom setup for each profile. Refer to the tables on pages 26 through 29 of these instructions for the correct soft boom configuration for your machine.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 9 of 25

19. Tap the **Back** icon to return to the **Boom/Nozzle** menu. Select **Recirculation**.

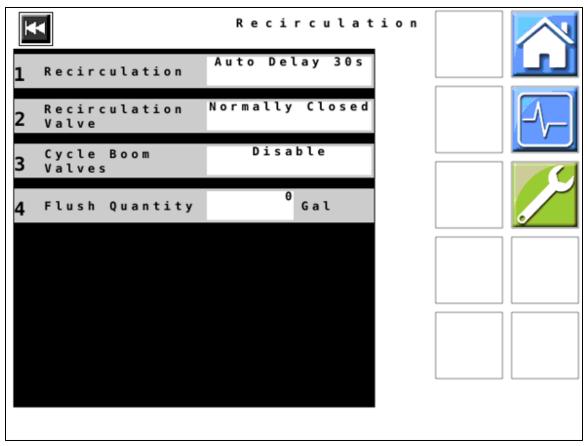


Figure 11 — Recirculation

20. Figure 11: Verify that all values displayed on your unit match those shown here. Change values if necessary.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 10 of 25

21. Tap the Back icon twice to return to the Settings menu. Select Pressure > Pump Setup.

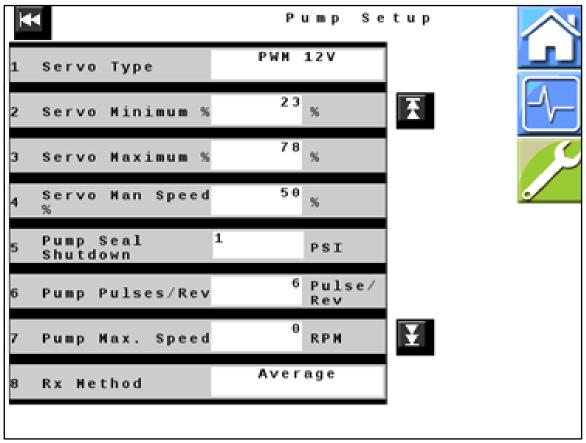


Figure 12 — Pump Setup Page 1

22. Figure 12: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 11 of 25

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com



23. Figure 13: Use the **Scroll Down** icon to view the second page and verify the values there as well.

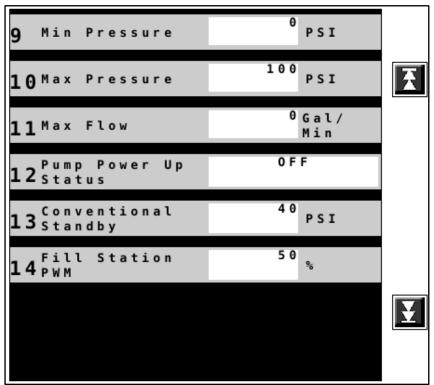


Figure 13 — Pump Setup Page 2

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 3/20/2025 Rev A Page 12 of 25

24. Tap the **Back** icon to return to the **Pressures** menu. Select **Sensor Setup.**

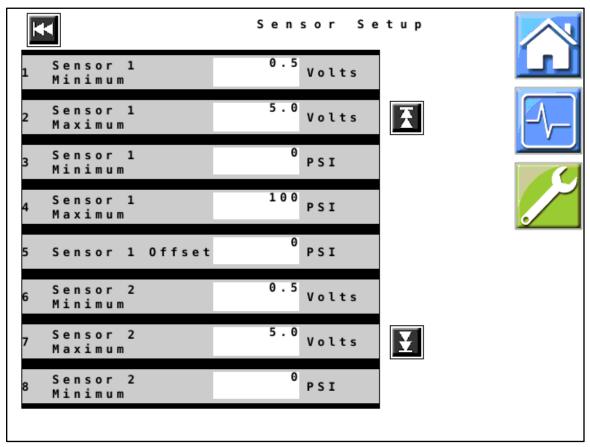


Figure 14 — Sensor Setup Page 1

- 25. Figure 14: Verify that all values displayed on your unit match those shown here. Change values if necessary.
- 26. Figure 15: Use the **Scroll Down** icon to view the second page and verify the values there as well.




Figure 15 — Sensor Setup Page 2

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 13 of 25

27. Tap the **Back** icon to return to the **Pressures** menu. Select **Control Tuning**.

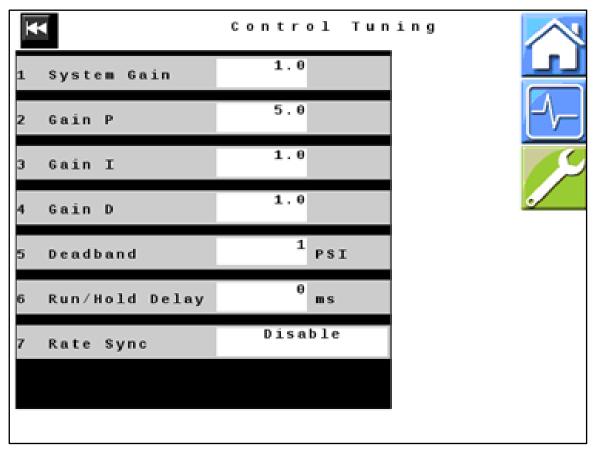


Figure 16 — Control Tuning

28. Figure 16: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 14 of 25

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com



29. Tap the **Back** icon twice to return to the **Settings** menu. Select **Flow > Flowmeter**.

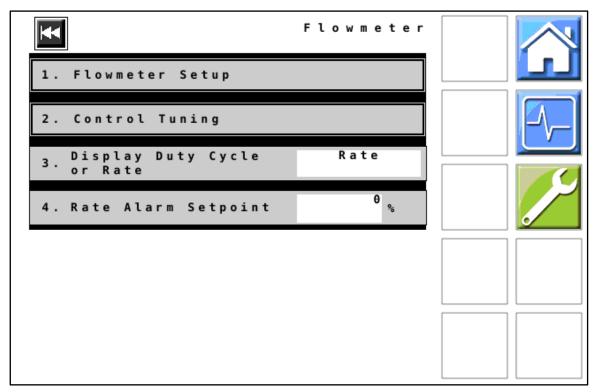


Figure 17 — Flowmeter

30. Figure 17: Verify that all values displayed on your unit match those shown here. Change values if necessary.

Note: tapping the Display Duty Cycle or Rate icon changes which value is displayed on the home screen.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 15 of 25

31. Select Flowmeter Setup.

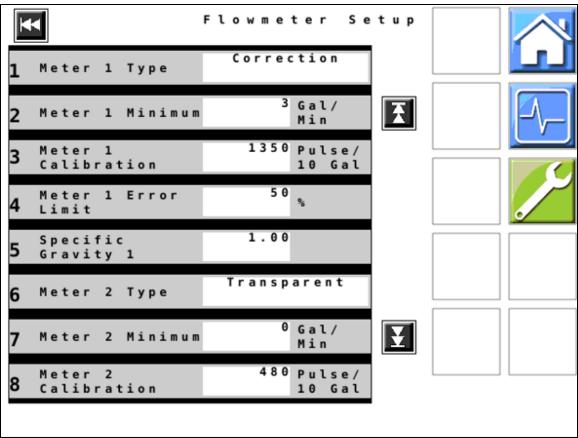


Figure 18 — Flowmeter Setup Page 1

32. Figure 18: The information in the fields on this screen is machine specific, verify that it is correct for your machine, and change any settings if necessary.

Note: Obtain the Meter 1 Calibration value from flowmeter tag. If machine is equipped with a fill-station flowmeter, obtain Meter 2 Calibration value also.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 16 of 25

Figure 19: Use the **Scroll Down** icon to view the second page and verify the values there as well.

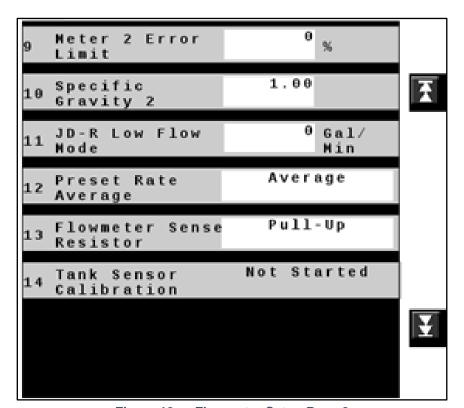


Figure 19 — Flowmeter Setup Page 2

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 17 of 25

33. Tap the **Back** icon to return to the **Flow** menu. Select **Control Tuning.**

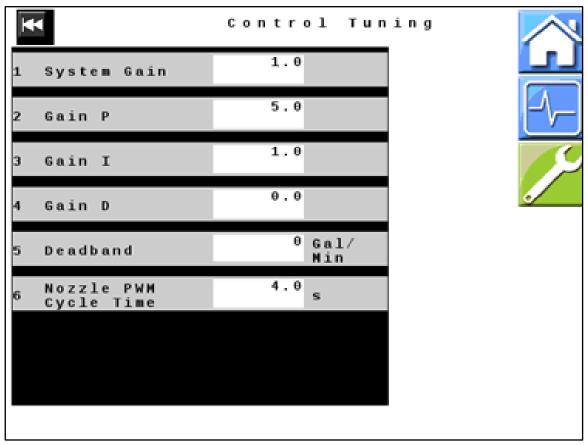


Figure 20 — Control Tuning

34. Figure 20: Verify that all values displayed on your unit match those shown here. Change values if necessary.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 18 of 25

35. Tap the **Back** icon twice to return to the **Settings** menu. Select **Navigation > Vehicle**.

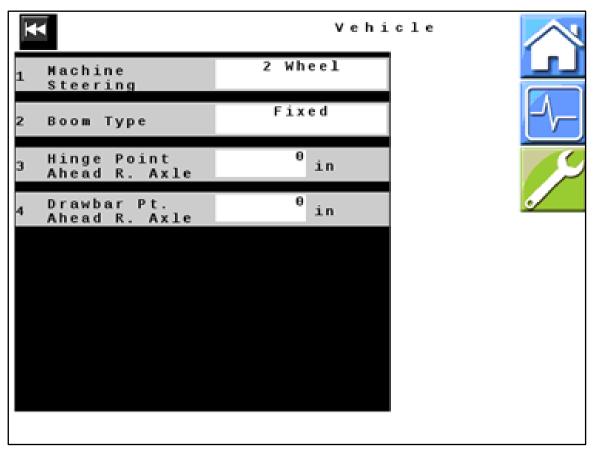


Figure 21 — Vehicle

36. Figure 21: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 19 of 25

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

37. Tap the **Back** icon to return to the **Navigation** menu. Select **Implement**.



Figure 22 — Implement

38. Figure 22: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 20 of 25

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

39. Tap the **Back** icon to return to the **Navigation** menu. Select **ISO Look Ahead.**

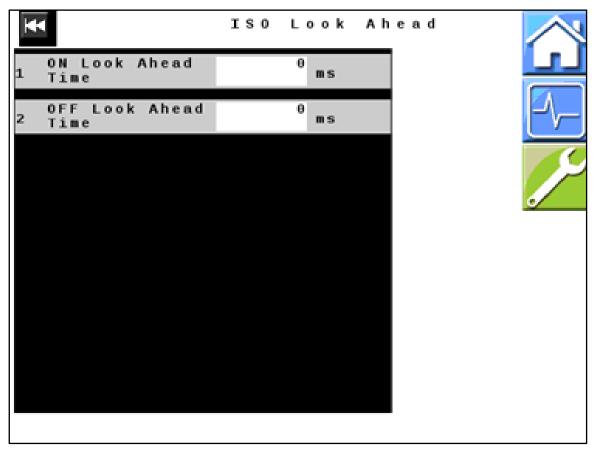


Figure 23 — ISO Look Ahead

40. Figure 23: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 21 of 25

41. Tap the **Back** icon to return to the **Navigation** menu. Select **GPS**.

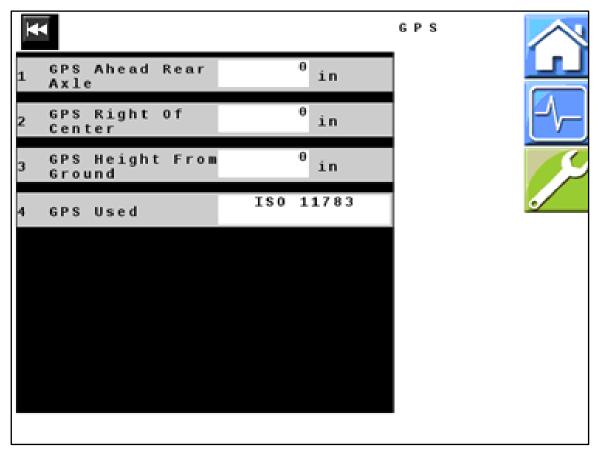


Figure 24 — GPS

- 42. Figure 24: Select the type of GPS from the list of available options. Not all of the options listed here may show on your system. Only the types available for your system will show on your list.
 - If your machine has serial GPS, select NMEA0183
 - If your machine has CAN GPS, available types include—in preference order:
 - a. J1939
 - ISO 11783 b.
 - **NMEA2000** C.

Verify that all other values displayed on your unit match those shown here. Change values if necessary.

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 22 of 25

43. Tap the **Back** icon to return to the **Navigation** menu. Select **Compass.**

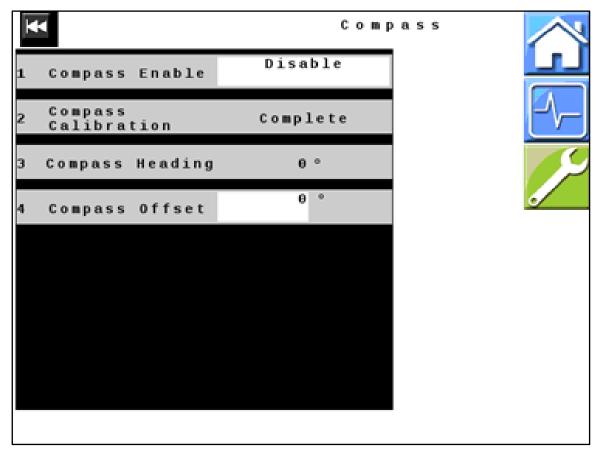


Figure 25 — Compass

44. Figure 25: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 23 of 25

45. Tap the **Back** icon to return to the **Navigation** menu. Select **Gyro.**

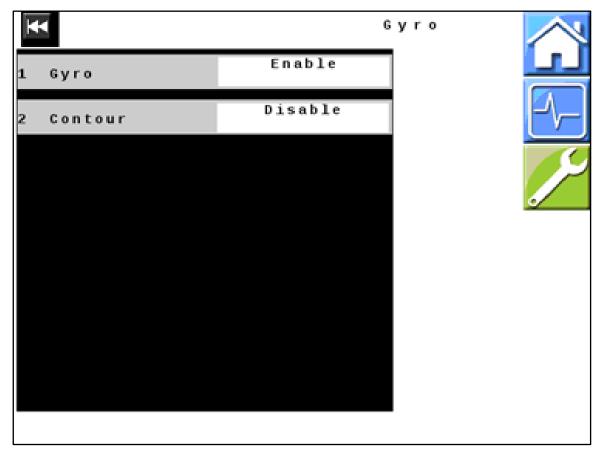


Figure 26 — Gyro

46. Figure 26: Verify that all values displayed on your unit match those shown here. Change values if necessary.

123000-247 Rev A 3/20/2025 Page 24 of 25

Soft Boom Configurations

		Soft	Boom	Setup		
S o f t B o o m	Start	End	S o f t B o o m	Start	End	
1	1	10	11	Θ	Θ	8
2	11	19	12	Θ	Θ	
3	2 0	2 8	13	Θ	θ	Ŧ
4	2 9	3 6	1 4	Θ	θ	
5	3 7	4 4	15	0	Θ	
6	4 5	5 2	16	Θ	0	
7	5 3	61	17	0	0	
8	6 2	7 0	18	0	θ	
9	71	8 0	19	0	0	¥
10	0	θ	2 θ	0	0	

132' x 20"

©2024 Capstan Ag Systems Inc. This product may be covered by one or more U.S. Patents. For more information go to www.BlendedPulse.com

123000-247 Rev A 3/20/2025 Page 25 of 25